

# JTECH<sup>®</sup> EXTEND Two-Way Radios

## Keypad Lock

The Keypad Lock can be activated to avoid accidentally changing the channel and the unit's preferred settings, while still being able to use the Push-To-Talk button and flashlight.



**Turn On Keypad Lock**  
Long Press of the F button.



**How to Know it's Working**  
The radio will beep and a lock will appear in the upper right corner of the screen.



**While Locked**  
The Push-to-Talk and F button will still work. The S/M and arrow keys will not.



**To Unlock**  
Long press of the F button until the radio beeps and the lock disappears. The radio is now unlocked and all keys will function as programmed.



## Please Note

The default setting of the Keypad Lock is the F key.

Depending on the programming of the radio, the Keypad Lock might be located under a different button.