

# JTECH<sup>®</sup> EXTEND Two-Way Radios

Find the Channel Frequency and Code on the radio you would like to match. Refer to the User Guide/Manual if needed.



### Press and Hold

The Push-to-Talk and F button while turning the unit on.



### Use the Up/Down Keys

To select the menu named CH. SETTING.



### Press the S/M Key

To select the Channel Setting Menu.



### Use the Up/Down Keys

To select the sub menu named CH. FREQ.



### Press the S/M Key

To select. The number will begin to flash.



### Use the Up/Down Keys

To select the channel frequency that is desired.

*Start here if using "To Change Frequency and Code on Other Channels."*



**Press the S/M Key**

To select. The number will stop flashing.



**Use the Up/Down Keys**

To select the sub menu named CODE.



**Press the S/M Key**

To select. The number will begin to flash.



**Use the Up/Down Keys**

To select the channel frequency that is desired.



**Press the S/M Key**

To select. The number will stop flashing.



**Repeat**

If needed on any other channel that needs the frequency or code changed.



**Go to the Sub Menu CH. NO**

Press the S/M key. The number will begin to flash.



**Use the Up or Down Keys**

To find the desired channel.



**Press the S/M Key**

To select. The number will stop flashing. Start at the 4th step.