




Thank you for joining the NoQ Team!

Getting started is easy, but if you find you need extra help, scan the QR for the full user guide or contact our amazing support team!

Components

Your NoQ paging system is comprised of three key elements:

- The NoQ All-in-One Transmitter & Charger
- The NoQ Pagers
- Transmitter USB C Power Supply

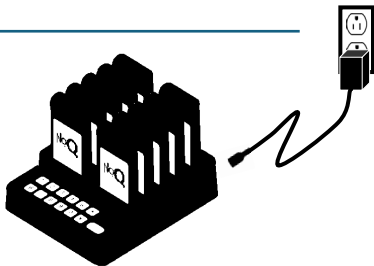

Quick Setup

- Connect the USB C power supply to the All-in-One NoQ transmitter, and then plug it into a standard 110–240 volt outlet. The transmitter will display 4 dashes (- - - -).
- Insert pagers into the charger slots. A red light will illuminate on each pager, indicating proper charging. Please take note of the following:
 - **'LO'** on the number display means the battery is low and cannot be used.
 - Allow 4 hours for a complete charge of the pagers.

System Use

Distributing a Pager

- Remove a NoQ pager from the charger.
- The pager will flash, vibrate or beep to preview what the alert will look like for the guest.
- Hand the pager to the guest, stating that the pager will activate when they have been paged.

Paging a Guest

- To page a guest, enter the 1 to 3-digit pager number into the transmitter and press **SEND**.
- The pager will alert until it is returned to the charger.



www.CustomerPaging.com
866.784.0022

User Guide

